



DEALER INFORMATION

WIRING INSTRUCTIONS



WIRING DIAGRAM

The Isolation Control should be user whenever a single switch is operating two or more motors. The control can be used on existing job sites where motors might be parallel wired. Using one Isolation Control per motor will keep the direction separated and protect the motor from damage. The control should only be used with Momentary Contact switches and 120V AC rated motors.

It is NOT recommended to install the isolation control in a metal box without an insulator between the control board and enclosure.

