
SMC CONTROL WIRING DIAGRAM

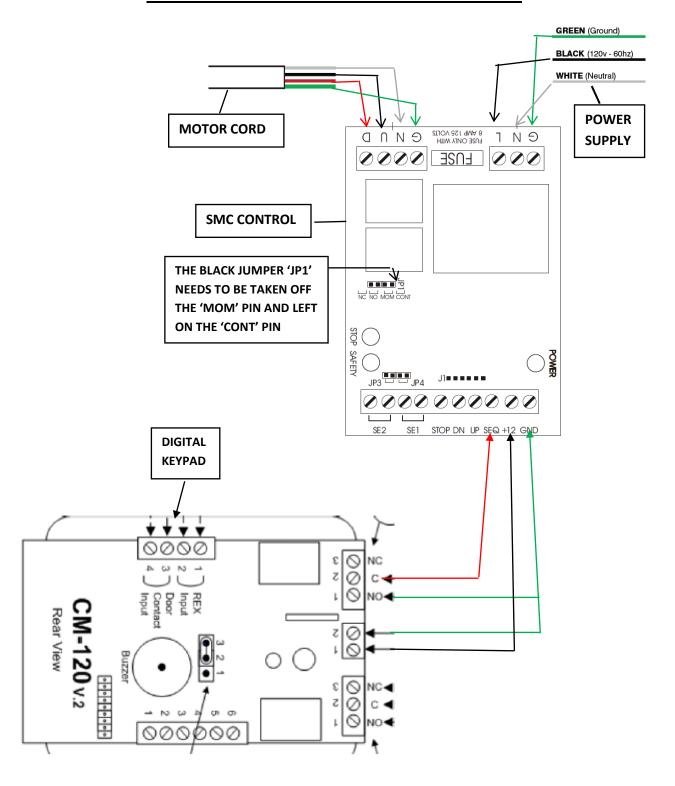



Toll Free Phone: 1.866.705.4668
Toll Free Fax: 1.866.400.1540
Email: sales@pentagonshutters.com
YOUR CONFIDENCE SECURED

WIRING INSTRUCTIONS (shown above)

When looking at the back of the keypad connect the following terminals

- 1. The left relay, terminal #2 'C' to the 'SEQ' on the SMC
- 2. The left relay, terminal #1 'NO' to the 'GND' on the SMC
- 3. The center keypad power supply, terminal #2 to the 'GND' on the SMC
- 4. The center keypad power supply, terminal #1 to the '+12' on the SMC

PROGRAMMING INSTRUCTIONS

To test and confirm that the keypad would operate the shutter, user # 3 has been set to operate the shutter. Each code can be one to eight characters and must be followed by the '*' key to activate the keypad.

The code is set to 4367. To operate the shutter up, press '4367*'

To add more user's and their corresponding codes follow the instructions on page four of the following instructions to add, change, or delete users.

All user #'s and their codes should be recorded on the provided sheet at the end of the programming instructions.

When programming the keypad please note that any characters inside square brackets [] must be pressed and released at the same time.

To enter user #4 with a code of 6789, you would press the following:

- 1. Enter programming mode by pressing [1*] followed by '1234*'. The green LED light will turn on showing that the master code has been accepted.
- 2. To add user #4 and the code press: [2*] followed by '4, #, 6789*, 6789*'.
- 3. To exit the programming mode press '*#*'

For assistance please call Pentagon at 1-866-705-4668 or call Camden direct at 1-905-366-3377 and ask for Peter.

