


### WIRE EXITS

- Wire exits can be on the right or left side of the shutter box housing, depending which side the motor is on
- C1 - Coil dies - Bottom of box housing
- C4 - Coil side of box housing
- C5 - Coil side - Top of box housing
- NC6 - Non-coil side - Top of box housing
- NC7 - Non-coil side - Top of box housing
- NC10 - Non-coil side - Bottom of box housing
- IB11 - Wire in box housing
- E12 - End cap wire exit

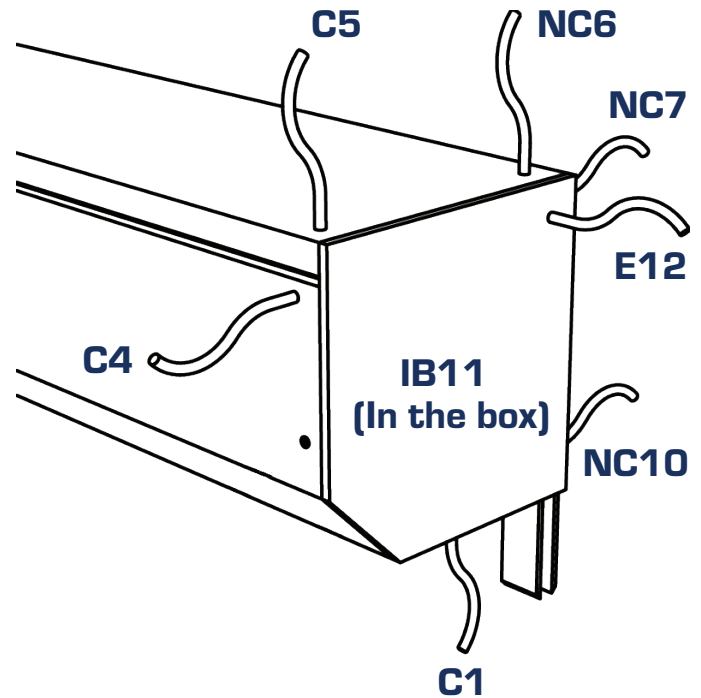

### CMO EXITS (CRANK MANUAL OVERRIDE)

- Wire exits can be on the right or left side of the shutter box housing, depending which side the motor is on
- C2 - Coil side - Angle of box housing
- NC9 - Non-coil side
- T81 - Coil side - Bottom of box housing
- T82 - Coil side

